

LEVEL² INITIA™

yeast for bioprotection of white and rosé juice in the pre-fermentation phase

Marion Bastien¹, Anthony Silvano¹, Anne Ortiz-Julien¹,
Ann Dumont¹, Vincent Gerbaux², Isabelle Davanture²

⁽¹⁾ Lallemand SAS – Blagnac – France

⁽²⁾ IFV – Beaune – France

*This article is a summary and improved version of two articles
published in Revue des Oenologues #179, #180, 2021*

The pre-fermentation phase during the vinification of white and rosé wines significantly increases the quality of the wines but also carries the risk of oxidation and the development of spoilage microorganisms. These risks may result in loss of quality.

In recent years, changes in winemaking practices, regulations and consumer demand have resulted in a significant decrease in the use of sulphites.

Increasingly, winemakers are considering bioprotection of musts using non-*Saccharomyces* yeast. Each species of these yeast has its own specific contribution, and differences between strains can also be observed within the same species. Bioprotection with non-fermenting non-*Saccharomyces* yeast is an innovative alternative solution to protect wines from oxidation and spoilage microorganisms.

A new selection of *Metschnikowia pulcherrima* was isolated by IFV Beaune (France) from an original collection of more than 500 strains, for its strong capacity to rapidly consume dissolved oxygen. This new selected yeast is Level² Initia™.

BIOPROTECTION OF WHITE AND ROSÉ JUICE IN THE PRE-FERMENTATION PHASE

To ensure the smooth progress of white and rosé pre-fermentation phases, a yeast used for bioprotection at this stage must have certain oenological properties. Very low fermentation activity and a good multiplication capacity at low temperature are essential prerequisites, along with protection against oxidation.

1. Bioprotection against oxidation

A trial was carried out in 2020 with the Università degli Studi di Udine (Italy) on 50 kg of Sauvignon Blanc grapes divided into three homogeneous batches. One batch was inoculated with Level² Initia™ at 20 g/hL due to the high pH (3.9) of the juice and a strong presence of indigenous microflora (the usual recommended dose is 10 g/hL), before pre-fermentation maceration for 24 hours at 8°C. The other two batches were directly pressed, and with or without addition of SO₂ at 4 g/hL. After the pre-fermentation phase and subsequent clarification, the three batches were inoculated with the same *Saccharomyces cerevisiae*. The dissolved oxygen content was measured in the free-run juice from the press. The batch inoculated with Level² Initia™ and the batch with added sulphite both showed the same ability to maintain a minimal level of dissolved oxygen (Figure 1). The protection from oxidation was visible to the naked eye in the colour of the wine (Figure 2).

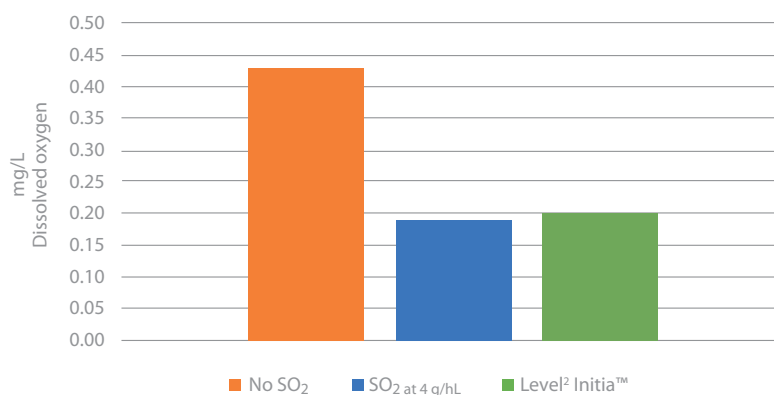


Figure 1. Measurement of dissolved oxygen in the press juice with SO₂ or Level² Initia™

Another trial was carried out in 2020 at a wine estate in Valencia (Spain) on 100 hL of Sauvignon Blanc.

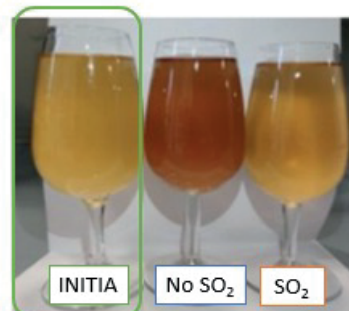


Figure 2. Colour of a Sauvignon Blanc wine after pre-fermentation maceration for 24 hours at 8 °C (Università degli Studi di Udine, Italy, 2020).

Inoculation with Level2 Initia™ was compared with another non-*Saccharomyces* yeast, also selected for bioprotection applications. Each yeast was added at a dose of 10 g/hL before stabulation for 5 days at 4°C. The batches, subsequently inoculated with the same *Saccharomyces cerevisiae*, exhibited similar fermentation kinetics. Analysis of thiols at bottling showed enhanced preservation of 3MH, A-3MH and 4MMP in the batch inoculated with Level2 Initia™ (Figure 3).

The Level2 Initia™ yeast thus allowed biocontrol of oxidation under these real winemaking conditions.

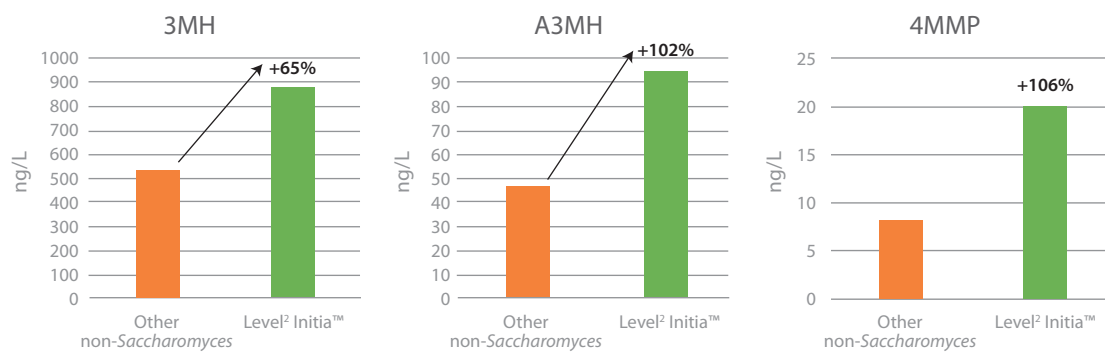


Figure 3. Analysis of 3MH, A-3MH and 4MMP thiols at bottling, Sauvignon Blanc 2020 (Valencia, Spain)

1.1 Mechanism of action

Metschnikowia pulcherrima yeasts do not have the ability to efficiently absorb lipids (polyunsaturated fatty acids and phytosterols) from grapes and must therefore synthesize these lipid compounds. Incorporation of lipids into the membrane is essential for their survival (Pina et al. 2004; Mejía-Barajas et al. 2018). A recent study compared the membrane compositions of *Saccharomyces cerevisiae* and non-*Saccharomyces* yeasts at the end of the alcoholic fermentation. *Metschnikowia pulcherrima* showed the highest membrane concentration of polyunsaturated fatty acids such as linoleic and linolenic acids, while only trace quantities of these lipid compounds were found in other yeasts. The synthesis require substantial consumption of oxygen. Our characterisation of different *Metschnikowia pulcherrima* strains demonstrates the variability within the different strains. Level2 Initia™ was selected for its strongest capacity to consume oxygen.

In addition to this phenotype, Level2 Initia™ revealed a tendency to decrease the copper content of juice. A laboratory-scale trial was carried out on a Sauvignon Blanc must to which 6.3 mg/L of initial copper had been added. Inoculation with Level2 Initia™ at 10 g/hL reduced the copper content by 41% in 24 hours and by 57% in 48 hours (data not shown). While the exact mechanisms remain unclear, there is again intra-species variability. As shown in Figure 4, Level2 Initia™ differs from other *Metschnikowia pulcherrima* strains in its ability to decrease copper concentrations in Chardonnay juice.

Oxygen plays a key role, both for enzymatic oxidation reactions (under the action of polyphenol oxidase) and for chemical oxidation. In addition, copper is a catalyst for these reactions. By contributing to the reduction in both dissolved oxygen and copper content, Level² Initia™ makes a dual contribution to limiting these oxidation phenomena.

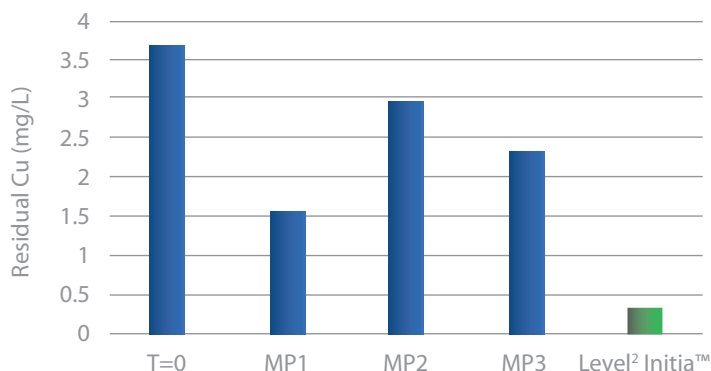


Figure 4. Residual copper in a Chardonnay juice with different strains of *Metschnikowia pulcherrima* including Level² Initia™

2. Microbiological bioprotection

The oenological interest of Level² Initia™ also lies in its microbiological bioprotection. Microbiological monitoring of *Hanseniaspora uvarum* and *Brettanomyces* populations was performed in a Chardonnay (Sicarex Beaujolais).

There was a significant total yeast population in the juice, of which more than one-third was *Hanseniaspora uvarum*. At the end of cold stabulation, 50% of the yeasts in the non-bioprotected batch were *Hanseniaspora* compared with 3% for the batch with Level² Initia™ (Figure 5). The other yeasts present in the non-bioprotected batch could include *Saccharomyces* and non-*Saccharomyces* species originating from the indigenous flora.

This trial, along with several others in wineries, thus confirms that Level² Initia™ can act on spoilage microflora and/or undesirable microflora. *Metschnikowia* occupies the microbiological space in the juice and prevents excessive growth of spoilage microorganisms, reducing the risk of undesirable compounds developing in the wine.

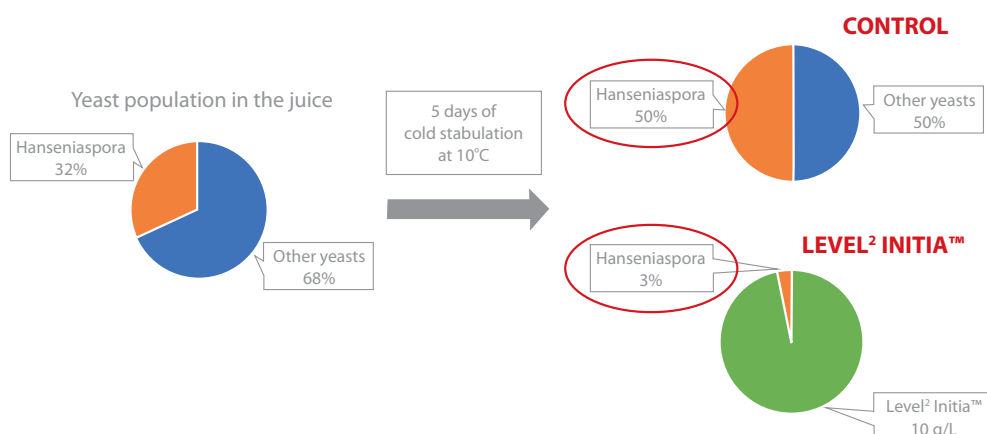


Figure 5. Microbiological bioprotection by Level² Initia™ (Chardonnay no SO₂, Sicarex Beaujolais, France)

Conclusion

In a context of global warming and rising pH levels, the risks associated with unwanted microflora are increasing, especially as SO₂ is no longer always sufficiently active and its use is increasingly avoided by winemakers and unwanted by consumers. In addition, white and rosé juice are particularly sensitive to the oxidation phenomenon, which appears as soon as the grapes are harvested. The new selected yeast Level² Initia™ performs a full bioprotection role by limiting oxidative, enzymatic and microbiological contamination phenomena and is therefore shown to be a valuable tool for limiting sulphite additions during the pre-fermentation phases in white and rosé vinification, while preserving the organoleptic potential of the wines.

